



02-2267 3 1/2" Replacement Flap 02-2268 4" Replacement Flap

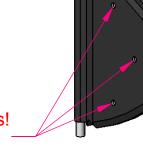








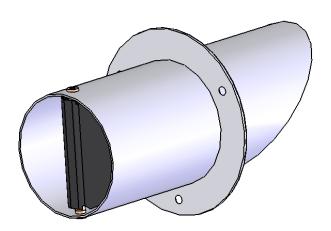

Must see IMCO on outside of flap.

- 1. To remove flap; strip away excess rubber from pin.
- 2. Support the bottom bushing with a metal object with a hole for the pin to protrude.
- 3. Use a pin punch to drive the flap pin down through the top bushing. (Pin should fall out).

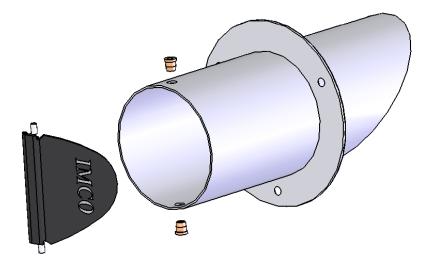

510 East Arrow Hwy San Dimas, CA 91773 (800) 899-8058 (909) 592-6162 www.imcomarine.com info@imcomarine.com

- 1. To install flapper; place flap pins in holes with IMCO logo on the outside.
- 2. Place bushings over each pin and started in the holes.
- 3. Support the bottom bushing with a metal base and hammer bushing until they are flush with outside of exhaust tip.
- 4. Use caution not to bend pin or distort the tip.