

Hoses shown installed to the outside of manifolds, typically they are installed to the inside but can be installed on either side.

