
TIME CO

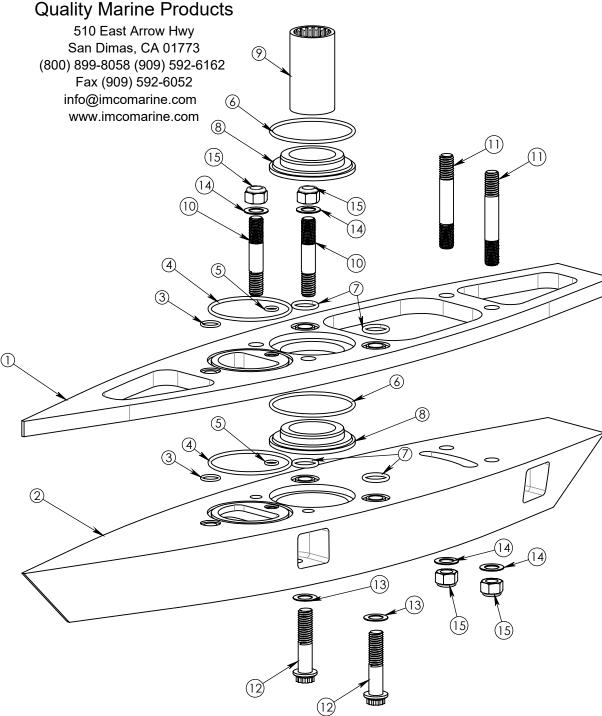

1/2" SCX DD SPACER KIT 01-8134 ASSEMBLY INSTRUCTIONS

- 1. Remove old short studs, 2 ea. on upper housing, 2 ea. on top of gear spacer (top studs only)
- 2. Install new studs (longer). Use provided Loctite.
- 3. Install alignment spacers on both spacer and gear spacer with "O" rings provided.
- 4. Install spacer and gear spacer to upper housing, use #(12)bolts first, then nuts with washers, all provided with kit.
- 5. Tighten nuts and bolts.
- 6. Install longer coupler to vertical shaft of lower unit. (Make sure all "O" rings are installed).
- 7. Install lower unit with nuts and washers provide, tighten all nuts.

Note: Studs on lower side of gear spacer and lower unit stay the same!

	Kit Part # 01-8134		
ltem	Description	Qty	Part Number
1	1/2" SCX DD Spacer	1	01-7160
2	SCX DD Shaft Gear Spacer (not in kit)	1	01-7150
3	"O" Ring (Cooling Water Passage Lower)	2	11-2014
4	"O" Ring (Water Passage)	2	11-2143
5	"O" Ring (PTFE Oil Passage)	2	11-4011
6	"O" Ring (Alignment Spacer)	2	11-2144
7	"O" Ring (Upper Screws)	4	11-2114
8	Alignment Spacer (1 provided)	1	01-2401
9	2 1/2" Coupler (17 tooth)	1	01-2141
10	Stud 7/16 x 2 1/2" S/S (Gear Spacer)	2	08-130904141
11	Stud 7/16 x 3" S/S (Upper Case)	2	08-130904161
12	Bolt(7/16-14 x 2" 12 Point S/S (Thin Head)	2	08-07090712°
13	Washer 7/16" AN S/S Thin	4	08-16090000°
14	Washer 7/16" AN S/S	10	08-100900001
15	Nut 7/16-20 Nylock S/S	8	08-080904001
	Provided But Not Shown		
	"O" Ring (Spur Gears)	1	11-2165
	"O" Ring (Water Passage 2)	1	11-2126
	"O" Ring (Cooling Water Passage Lower)	1	11-2135
	Nut 7/16-20 Nylock S/S Thin	2	08-090904001
	Loctite	1	09-2038