1/2" SC SPACER 2" LOWER ASSEMBLY INSTRUCTIONS

- 1. Remove old (short) studs, 4 ea. on the upper housing, 2 ea. on the lower case.
- 2. Install new studs (longer), use provided loctite.
- Place spacer on lower case, check that all "O" rings are in place and not damaged.
 Install alignment bushing and provided "O" rings on top side of spacer.
- 5. Install coupler.
- 6. Assemble lower unit to upper housing.
- 7. Tighten nuts.



Part Number

01-7010

11-2014

11-4011

11-2143

11-2228

01-2275

01-2168

6

6


1

1

08-130904141

08-160900001

08-090904001

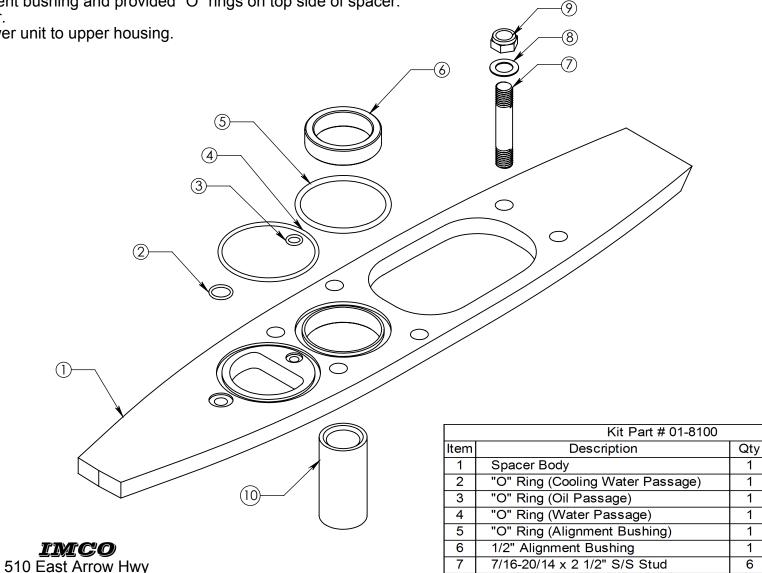

Washer 7/16 " AN S/S Thin

2 1/2" Coupler

Loctite

Nut (7/16-20 Nylock S/S Thin

8

9

10

11

San Dimas, CA 91773 (800) 899-8058 (909) 592-6162 Fax (909) 592-6052 info@imcomarine.com www.imcomarine.com