
1/2" SC SPACER 0-1" LOWER ASSEMBLY INSTRUCTIONS

- 1. Remove old (short) studs, 4 ea. on the upper housing, 2 ea. on the lower case.
- 2. Install new studs (longer), use provided loctite.
- 3. Place spacer on lower case, check that all "O" rings are in place and not damaged.
- 4. Install alignment bushing and provided "O" rings on top side of spacer.
- 5. Install coupler.
- 6. Assemble lower unit to upper housing.
- 7. Assemble 3/8" Socket Set Screw through upper case.
- 7. Tighten nuts.



1

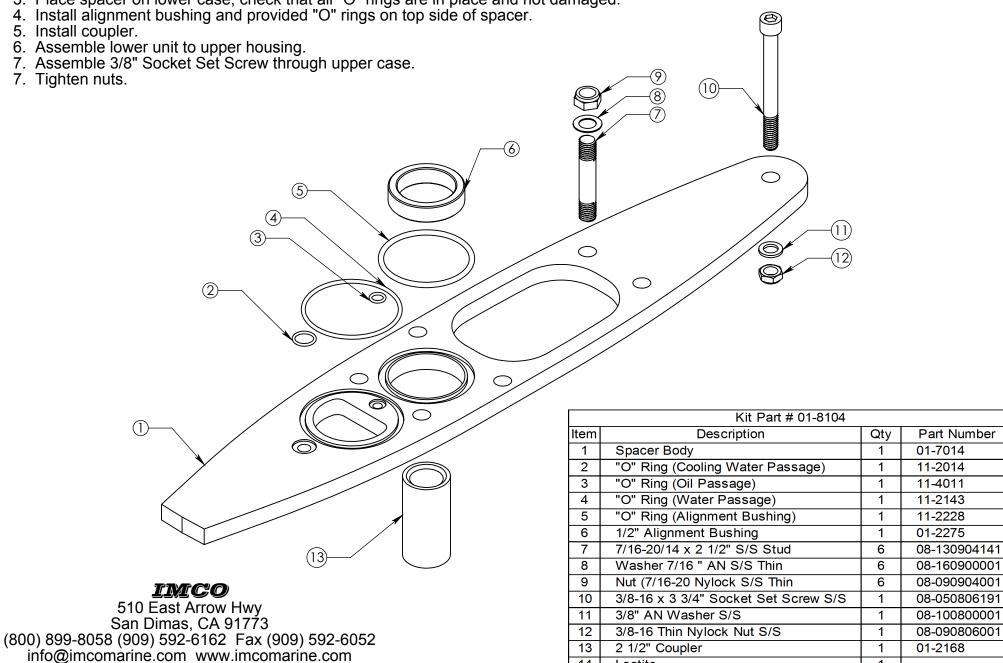

14

Loctite